Inspection schedule Vespa GT/GTS 250 – 300

Km x 1.000	1	5	10	15	20	25	30	35	40	45	50	55	60
Safety torques	С		С				С				С		С
Spark plug			R		R		R		R		R		R
Drive belt				R			R			R			R
Throttle cable	Α		Α		Α		Α		Α		Α		Α
Air filter			Cl		Cl		Cl		Cl		Cl		Cl
Drive belt air filter			С		С		С		С		С		С
Oil filter	R		R		R		R		R		R		R
Valve clearance					Α				Α				Α
Electrical system and battery	С		С		С		С		С		С		С
Brake fluid*	С		С		С		С		С		С		С
Coolant*	С		С		С		С		С		С		С
Engine oil	R	С	R	С	R	С	R	С	R	С	R	С	R
Rear hub gear oil	R		С		R		С		R		С		R
Brake pads	С	С	С	С	С	С	С	С	С	С	С	С	С
Variator rollers / sliding blocks			R		R		R		R		R		R
Tyre pressure and wearblocks	С		С		С		С		С		С		С
Test ride	С		С		С		С		С		С		С
Suspension			С		С		С		С		С		С
Steering	Α		А		А		Α		Α		А		А

^{*} Replace every 2 years

C = Check and clean, adjust, lubricate or replace if necessary.

Cl = Clean only

R = Replace

A = Adjust

