

FITTING INSTRUCTIONS

PRECAUTIONS:

Before carrying out any work on the machine or its exhaust, ensure that the temperature of the power unit and exhaust will cause no harm either to the operator or to parts which are not heat resistant (such as fairing, hoses, sleeves etc)

FITTING;

1. Remove the OE silencer
2. Fit the LeoVince silencer, aligning the header pipe with the exhaust flange on the power unit, and remembering to fit the sealing gasket when available. Partially tighten the two nuts on the mounting studs to allow a degree of realignment. This is made possible by the clearance between the flange and the mounting studs on the power unit.
3. Fit the brackets supplied, following the indications on the drawing enclosed, where you will see clearly described the correct relationship between the various spacers, washers (when required), and fasteners
4. Tighten up all the fasteners, starting with those on the mounting flange at the power unit.
5. Start the motor, wait a few minutes for it to reach operating temperature, and check that there are no gas leaks.

NB: after approximately 100 Km, check all the fasteners.

MAINTENANCE:

From time to time, check all the brackets and fasteners, which could be affected by use (sound-deadening material, seals and other rubber parts) and replace them periodically. The silencer may be cleaned using gasoline, diesel oil or alcohol. Absolutely avoid the use of any kind of solvent.

IT IS FORBIDDEN to make any modifications to silencers. Whatever form this may take, SITO GRUPPO INDUSTRIALE declines any responsibility for defects, problems, or malfunction arising from the use of any product which has been modified or tampered with.

TECHNICAL DRAWING

i_ N.B.: POSIZIONARE E SERRARE LE STAFFE IN ALLUMINIO
PRIMA DI MONTARE IL CORPO MARMITTA


gb_ NOTE: LOCATE AND SECURE THE ALUMINIUM BRACKETS
BEFORE MOUNTING THE EXHAUST BODY

f_ REMARQUE: POSITIONNER ET BLOQUER LES BRIDES EN ALUMINIUM
AVANT LE MONTAGE DU CORPS D'ECHAPPEMENT

d_ N.B.: BEVOR SIE DEN AUSPUFFTOPF MONTIEREN, SETZEN SIE DIE
ALU-BUEGEL UND ZIEHEN SIE SIE FEST AN

e_ NOTA: POSICIONAR Y APRETAR LOS ESTRIBOS EN ALUMINIO
ANTES DE MONTAR EL CUERPO DEL SILENCIADOR DEL ESCAPE

Vista da "B"

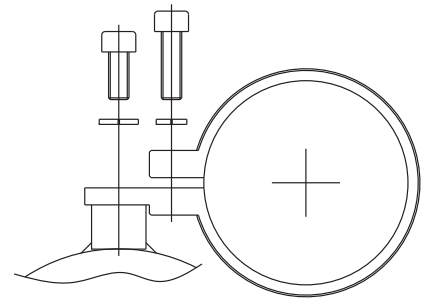

Vista da "A"

Flangia tipo "99A"

